


Quick Reference Guide to Sony TC-580:

Page:


- | | |
|---|--|
| 2 | Mechanical adjustment location of components |
| 3 | Head layout and head adjustment (azimuth) |
| 4 | Electrical Adjustments |
| 5 | Better view of location of pots and playback calibration |





FRONT

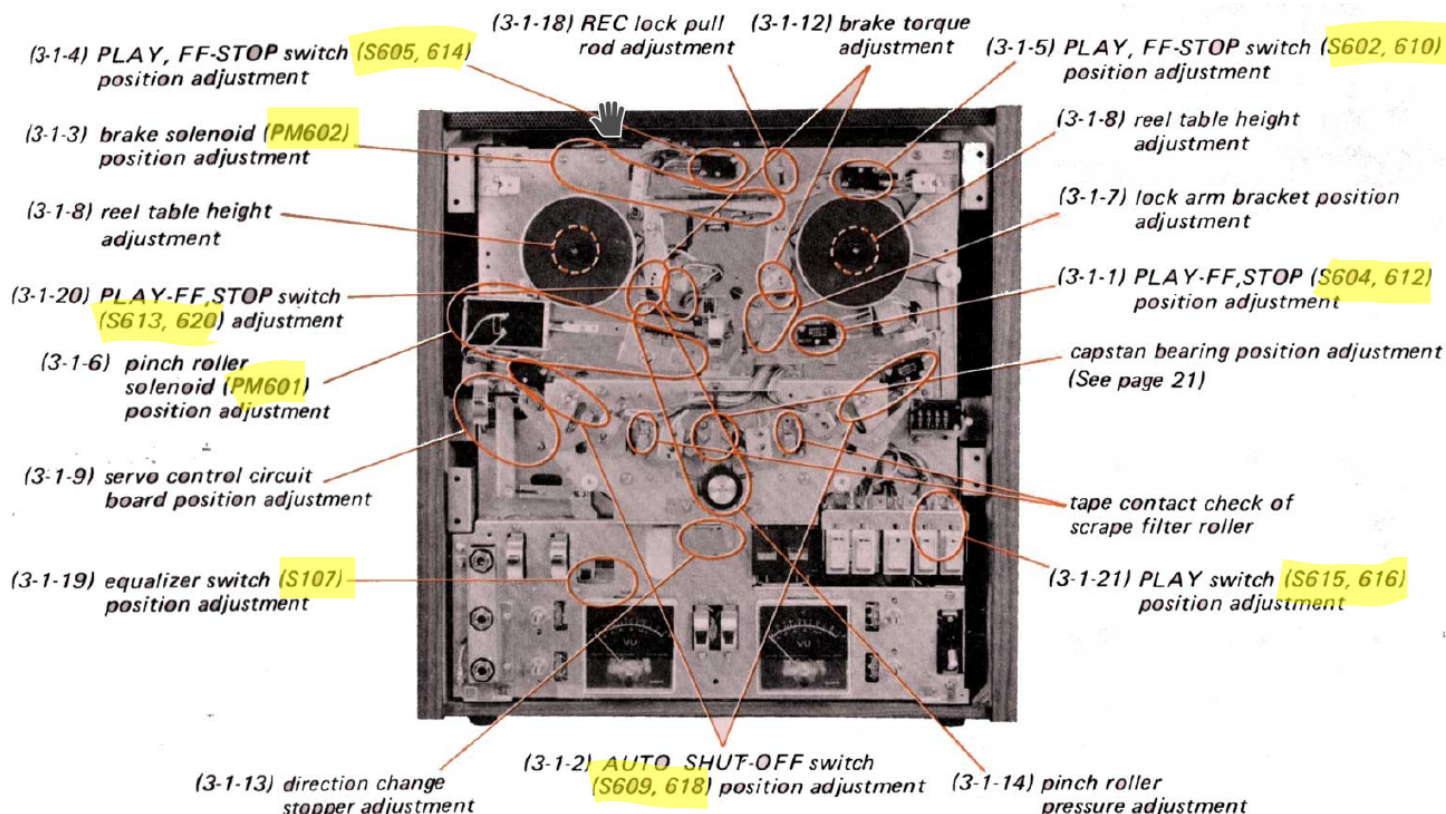

BACK

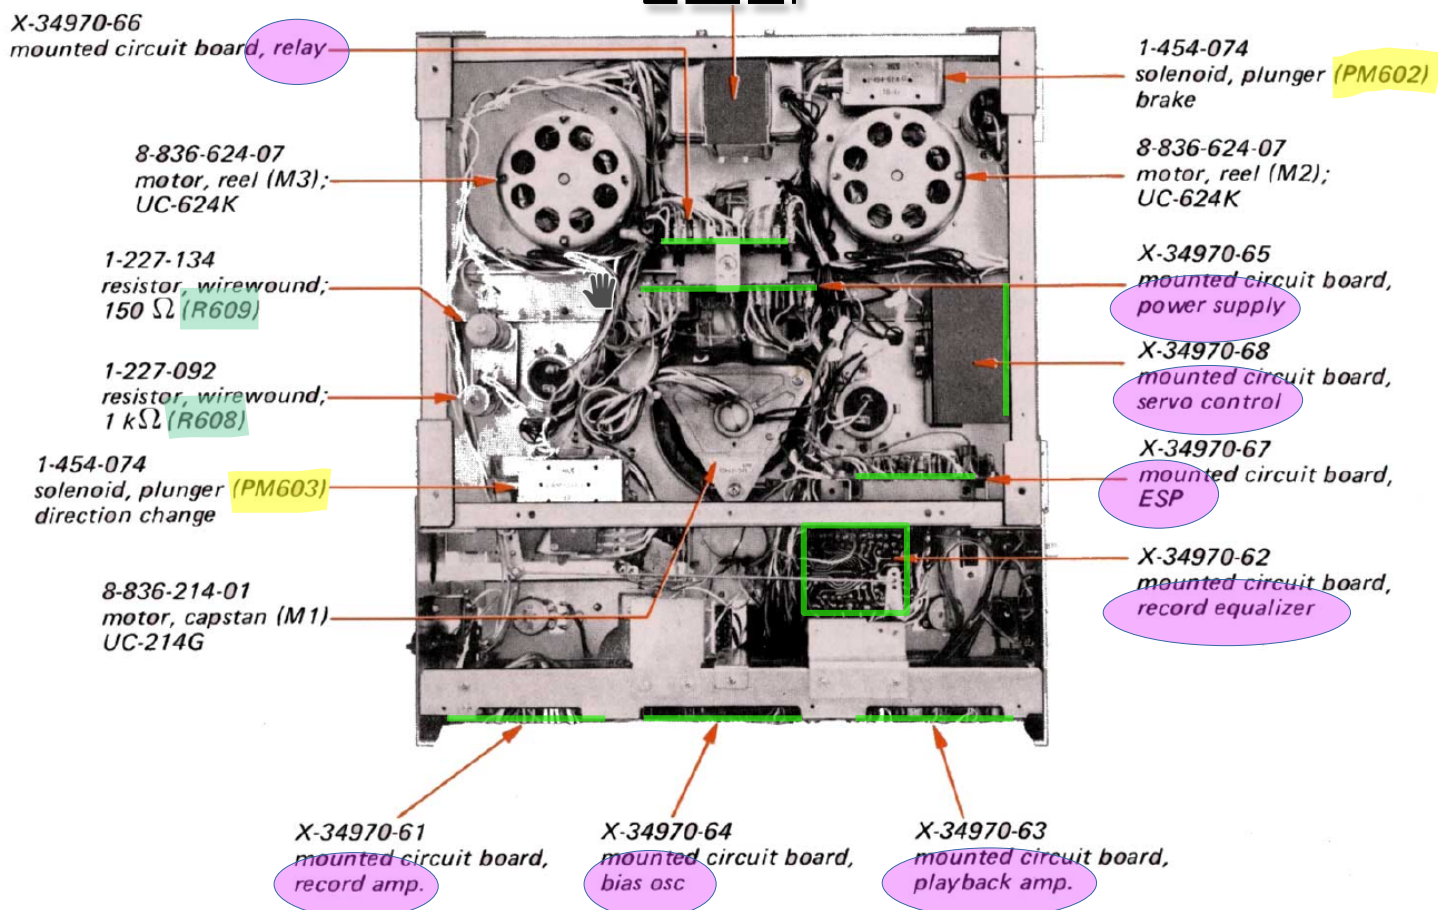

Head layout and head adjustment (azimuth)

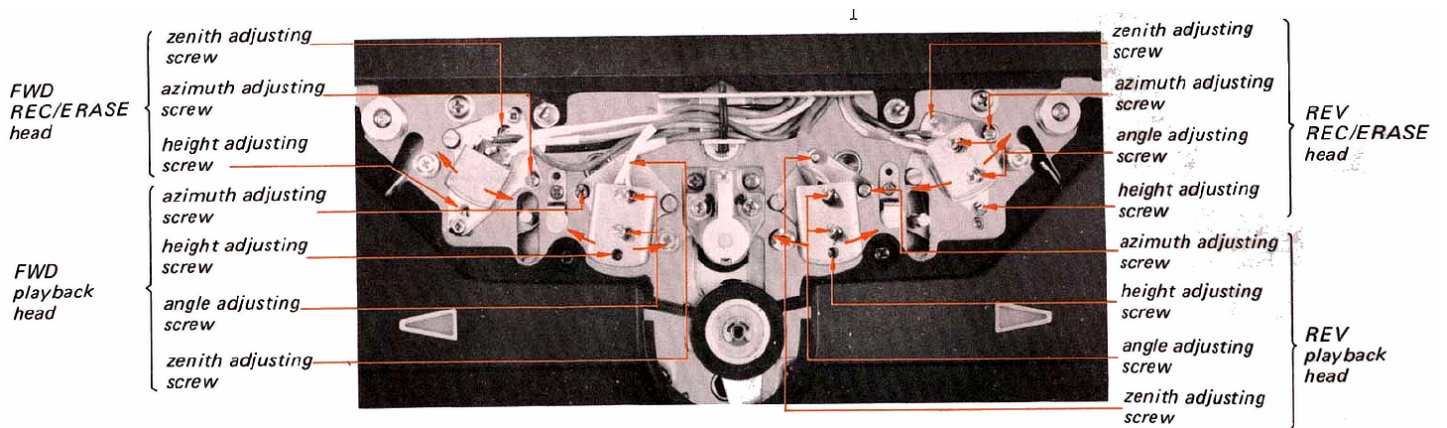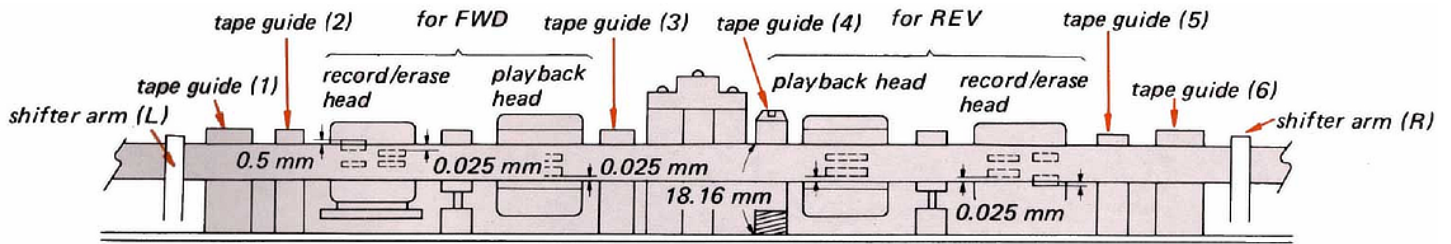

Electrical Adjustments



-Levels are (unless otherwise specified)
Normal INPUT level: -10 dB (245 mV)
Normal OUTPUT level: 0 dB (775 mV)


-Tape speed: 19 cm/s
-Tape select switch: NORMAL

-AUX Ref. Input Level definition:

Input 1 kHz -10 dB on AUX IN, then adjust AUX volume control knob for 0 dB on AUX OUT. Leave knob in position.

Location of adjustment parts:

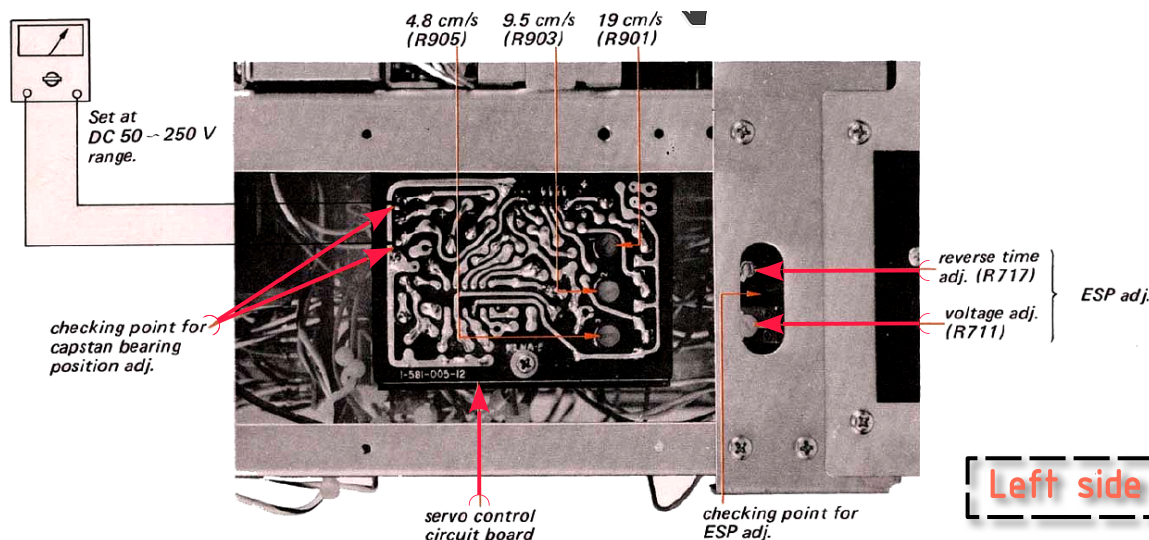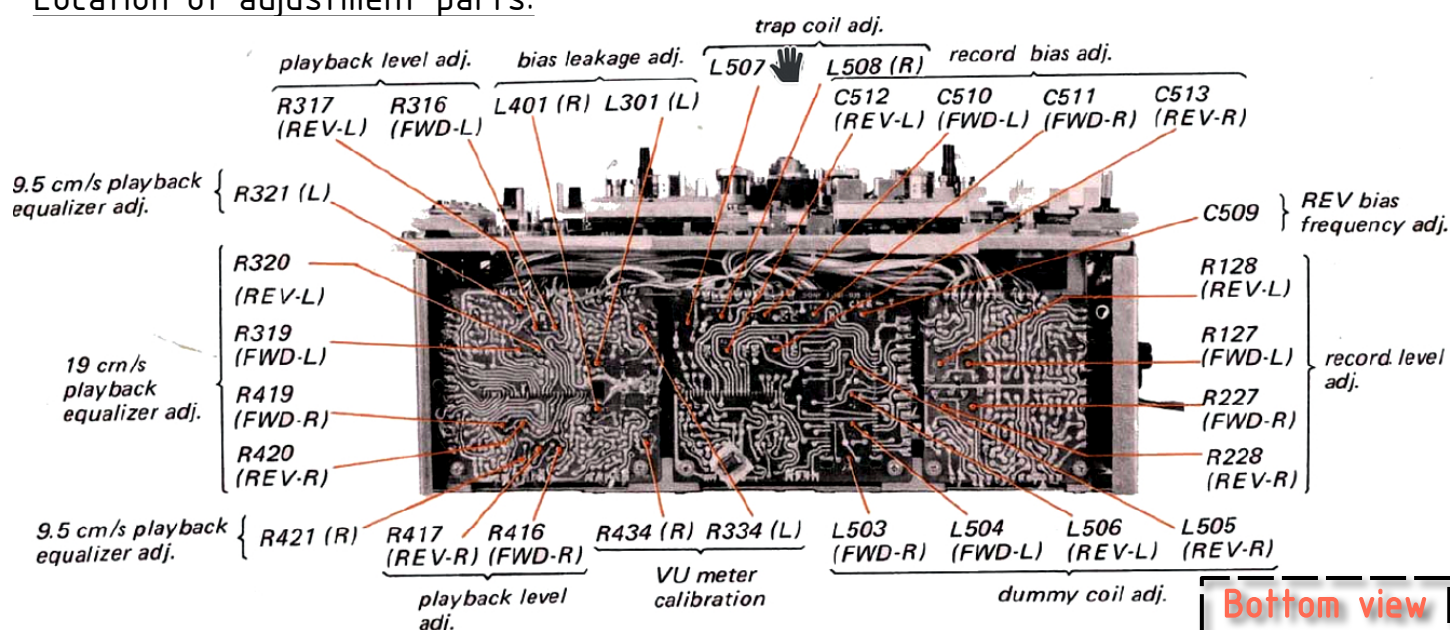

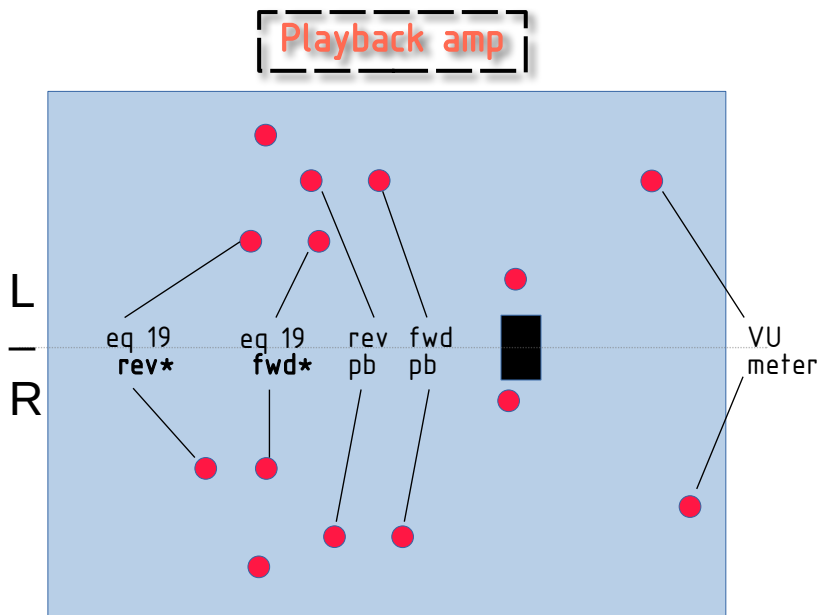

Procedure for playback calibration:

- playback 0 dB and adjust **[fwd pb]** and **[rev pb]** for 0,775V on line out
- playback 400 Hz & 10 kHz tones and adjust **[eq fwd]** and **[eq rev]** for equal level

*) error in the SM

This document is a work in progress